

400 W. Artesia Blvd.
Compton, CA 90220
Fax: (310) 747-3912
Ph: 1-800-776-0767
E-Mail: info@procompusa.com
Website: www.procompusa.com

EXPLORER

L I G H T I N G

PRO COMP SUSPENSION

Part#

9640 4" 35W HID Flood Light Kit
w/ Clear/Amber Stone Guard

9670 7" 35W HID Flood Light Kit
w/ Clear/Amber Stone Guard

9641 4" 35W HID Spot Light Kit
w/ Clear/Amber Stone Guard

9671 7" 35W HID Spot Light Kit
w/ Clear/Amber Stone Guard

This document contains very important information that includes warranty information and instructions for resolving problems you may encounter. Please keep it in the vehicle as a permanent record.

Important!:

- ◆ It is recommended that this installation is completed by a professional mechanic!
- ◆ **ALWAYS** wear safety glasses when using power tools or working on the vehicle!

Electrical Hazard:

- ◆ Disconnect the battery ground cable before working on the lights.
- ◆ Make sure the lights are properly grounded.
- ◆ **DO NOT** use battery while connecting lights.
- ◆ Remove all jewelry during the installation.
- ◆ Be sure the work area is clear of any fuel lines, fuel tank, brake lines, electrical wires, etc. before drilling.

Electrical, burn and Fire Hazard:

- ◆ Always use the control switches, relays and harness provided with the kit.
- ◆ **DO NOT** modify the bulb, switch, relay and harness, ballast or use bulbs other than those specified.
- ◆ **DO NOT** touch the lamp during or immediately after use with fingers or bare skin.
- ◆ **DO NOT** look directly at the lamp or work near the operating lamp for an extended period of time.
- ◆ **DO NOT** route the wiring harness near any sharp edges, hot surfaces or moving parts.
- ◆ Be sure to secure the wiring harness to avoid damage, electrical shorts or fire.

Equipment Damage:

- ◆ Make sure bolts are tightened properly.
- ◆ **DO NOT** operate the lights with the covers installed.
- ◆ **DO NOT** turn the lights on and off frequently.
- ◆ Choose a flat area with adequate space for installation.
- ◆ Install light with the drain holes facing down. (allowing any water to drain)

HID Light Installation:

1. Disconnect the negative (-) ground cable from the battery.
2. Select a location on the vehicle to mount the Pro Comp lights.
3. The mounting location should be a solid, vibration-free mounting point that provides adequate clearance for the light housing and easy access to the mounting hardware.
4. The selected mounting surface should be flat and larger than the light mounting bracket base.
5. The lights should be mounted in the upright (bracket down) position to reduce the possibility of water entering the light.

NOTE: If the lights must be mounted inverted (bracket up), the lens must be rotated.

IMPORTANT!: DO NOT block other vehicle lighting such as headlamps, turn signals, fog lamps, etc. with the new lights

IMPORTANT!: DO NOT block any engine cooling or intake air openings with the new lights.

6. Drill a **7/16"** (**11mm**) mounting hole for each light being installed. Remove the **10mm** hex nut, lock washer and flat washer from the light stud.
7. Install the light to the previously drilled mounting hole using the supplied **10mm** light mounting hardware.



Wiring Harness Connection:

1. Install the switch inside the vehicle cabin in a convenient location.
2. Connect the power (red), switch (blue) and ground (black) wires to the switch.
3. Connect the supplied switch power wire (blue) to a switched power wire inside the vehicle cabin.
4. Connect the HID light wiring specific to your application per the wiring diagrams on pages 4 and 5.


Final Connections:

1. Attach the red wire to positive (+) 12 volt DC battery terminal.
2. Attach large black wire to the negative (-) 12 volt DC battery terminal.
3. Use wire ties to secure the wires to the vehicle and/or bundle the excess harness wires together.
4. Re-attach the vehicle battery cables, positive (+) and negative (-). Attach the ground last.

Pro Comp HID Light Wiring Schematic: Using Supplied light Wiring

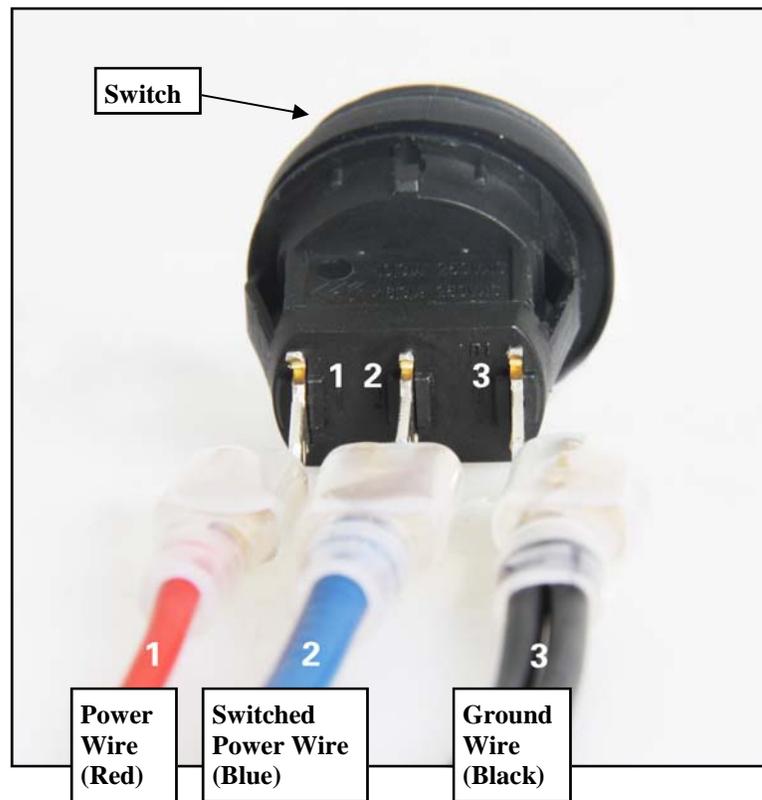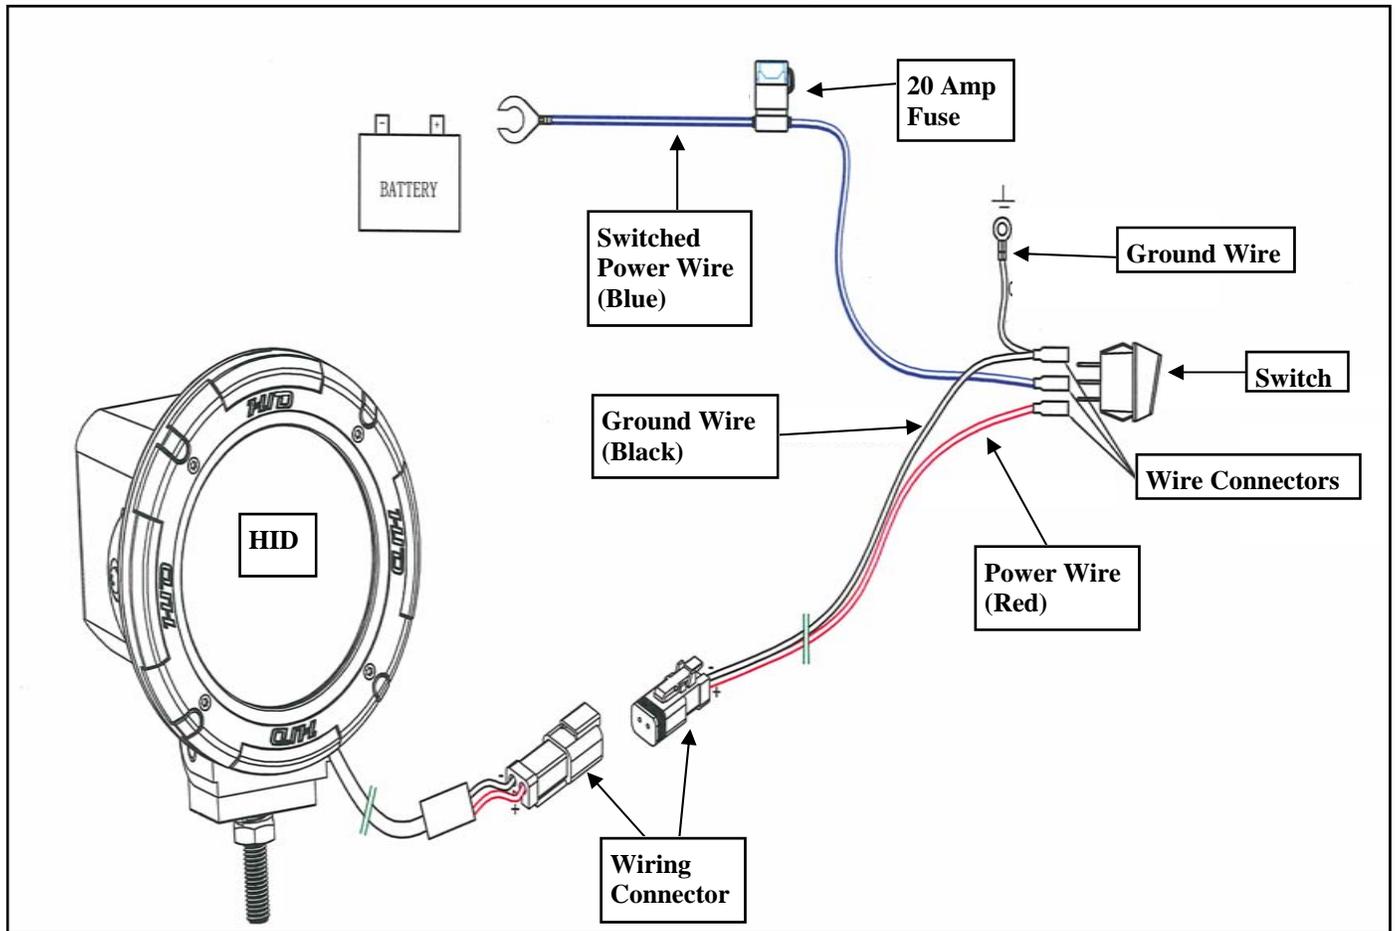

Pro Comp HID Light Wiring Schematic: Using Relay and Wiring Harness

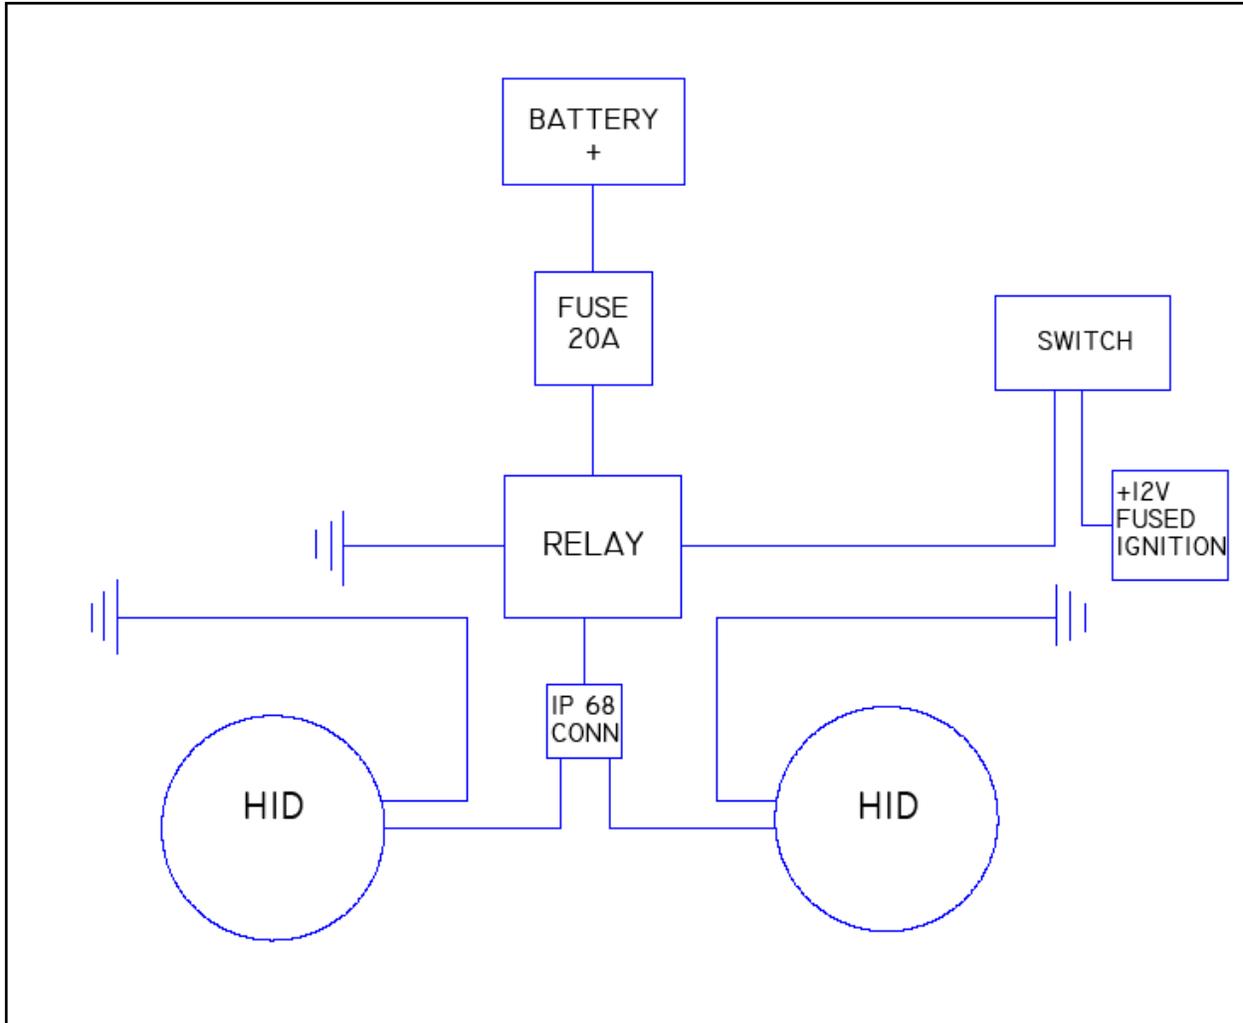



The PRO COMP PROMISE WARRANTY

At Pro Comp, we know you have many choices when selecting products to personalize your vehicle. You should demand nothing but the highest quality available and have total confidence that the products you selected are the best in the industry. It is for these reasons that Pro Comp Suspension products are backed by the best warranty in the industry...the Pro Comp Promise!

Pro Comp promises that its products will last a lifetime or we will replace it free of charge. It's that simple! Because of our commitment to quality and manufacturing excellence, we are able to stand behind our products. FOREVER.

It is Pro Comp's Promise that if one of our suspension products breaks not due to misuse, neglect or vandalism, we will replace it. Whether you are the original purchaser or not, you can be assured that we will make it right. The Pro Comp Promise covers all suspension products including shocks and steering stabilizers. Buy Pro Comp Suspension today and enjoy it for the rest of your life!

That's our Pro Comp Promise!

Notice to Owner, Operator, Dealer and Installer:

Vehicles that have been enhanced for off-road performance often have unique handling characteristics due to the higher center of gravity and larger tires. This vehicle may handle, react and stop differently than many passenger cars or unmodified vehicles, both on and off-road. You must drive your vehicle safely! Extreme care should always be taken to prevent vehicle rollover or loss of control, which can result in serious injury or even death. Always avoid sudden sharp turns or abrupt maneuvers and allow more time and distance for braking! Pro Comp reminds you to fasten your seat belts at all times and reduce speed! We will gladly answer any questions concerning the design, function, maintenance and correct use of our products.

Please make sure that the Dealer / Installer explains and delivers all warning notices, warranty forms and instruction sheets included with Pro Comp product.

Warranty and Return Policy:

Pro Comp warrants its full line of products to be free from defects in workmanship and materials for the life of the product. Pro Comp's obligation under this warranty is limited to repair or replacement, at Pro Comp's option, of the defective product. Any and all costs of removal, installation, freight or incidental or consequential damages are expressly excluded from this warranty. Pro Comp is not responsible for damages and / or warranty of other vehicle parts related or non-related to the installation of Pro Comp product. A consumer who makes the decision to modify his vehicle with aftermarket components of any kind will assume all risk and responsibility for potential damages incurred as a result of their chosen modifications. Warranty coverage does not include consumer opinions regarding ride comfort, fitment and design. Warranty claims can be made directly with Pro Comp or at any factory authorized Pro Comp dealer.

IMPORTANT! To validate the warranty on this purchase please be sure to mail in the warranty card.

Claims not covered under warranty

* Parts subject to normal wear; this includes bushings, bump stops, ball joints, tie rod ends and heim joints.

* Finish after 90 days.

* Damage caused as a result of not following recommendations or requirements called out in the installation manuals.

Pro Comp MX Series coil-over shocks are considered a serviceable shock with a one-year warranty against leakage only. Rebuild service and replacement parts will be available and sold separately by Pro Comp. Contact Pro Comp for specific service charges. Pro Comp accepts no responsibility for any altered product, improper installation, lack of or improper maintenance or improper use of our products.

E-Mail: info@procompusa.com
Website: www.procompusa.com
Fax: (310) 747-3912
Ph: 1-800-776-0767

PLACE
WARRANTY REGISTRATION
NUMBER
HERE: _____